

Replacing The Flashtube in the Zeus Z2500SH Standard Flash Head



When replacing the flashtubes in your ZEUS flash head, first **ensure that the ZEUS power pack is turned OFF and unplugged** from the AC power source. With the power pack turned off, disconnect your flash head(s) from the power pack and allow the units to cool completely.

Never handle your flashtubes with your bare hands. Wear cloth or insulated gloves or use a piece of cloth when handling the tubes. Skin oils can cause uneven heating of the flashtube surface and can lead to premature failure.



Please note that your flashtubes are **very fragile** and should be handled with care. The flashtube fits snugly into the sockets on the faceplate of the Zeus head and should not be forced in or out of the unit.



1. Remove the exhausted flashtube.

Grip the outside envelope of the flashtube and gently pull it up and straight out of the unit. Remove the plastic insulating sleeves located on the legs of the tube. Be sure to save these - they will be used with your new, replacement flashtube and are essential safety pieces.


2. Place the insulating sleeves.

Affix the three plastic insulating sleeves onto the three metal legs of your new flashtube. When placing the sleeves, ensure that the legs are straight. They may need to be straightened either with your fingers or with a pair of needle nose pliers.



3. Install the new flashtube.

Take the replacement flashtube and line up each of the three metal legs with the three corresponding sockets on the faceplate. Insert the flashtube by gently and evenly pushing until the tube is seated all the way down in the unit. The flashtube should fit snugly and not be touching any metal parts on the head.

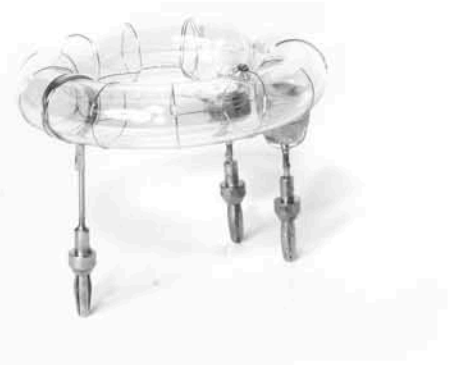

Please call us on our **Toll Free Line** at **1-800-443-5542** or **1-877-714-3381** if you have any questions or need any assistance. We're here Monday through Friday, from 9:00 am until 5:00 pm, CST.

Paul C. Buff, Inc. 2725 Bransford Avenue Nashville, Tennessee 37204